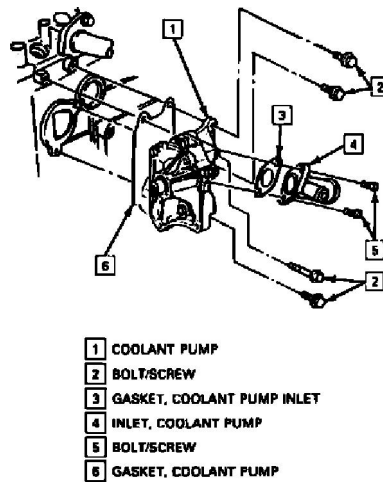


## Water Pump: Service and Repair



**Fig. 13 Removing Water Pump**

1. Disconnect battery ground cable, then drain cooling system.
2. Remove alternator, then disconnect radiator and heater hoses from inlet.
3. Remove water pump attaching bolts **Fig. 13**, then water pump and pulley assembly.
4. Separate pulley and water pump.
5. Reverse procedure to install, torquing all bolts/nuts to specifications.