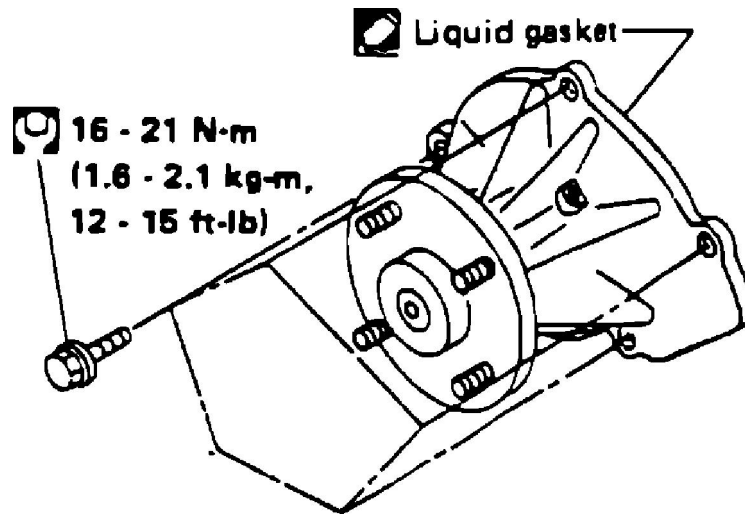


## Water Pump: Service and Repair



**Fig. 27 Water Pump Replacement**

1. Disconnect battery ground cable and drain cooling system.
2. Remove drive belts for compressor, power steering, and alternator.
3. Remove water pump pulley, then the water pump and gasket, **Fig. 27**.
4. Reverse procedure to install, using new gasket.